

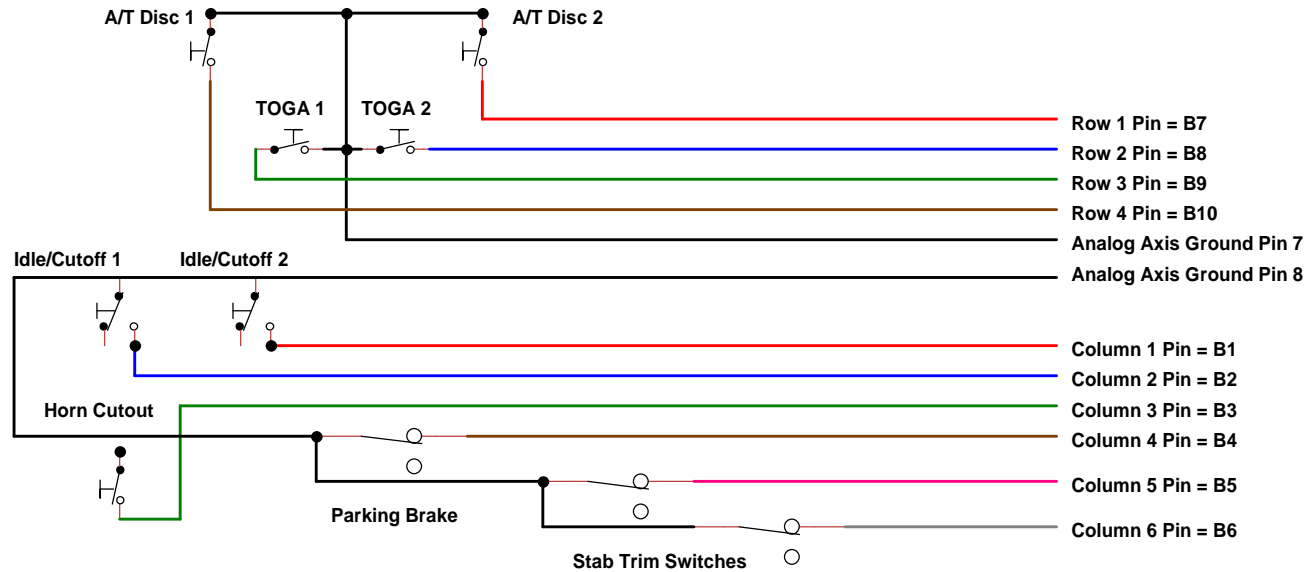


Connecting The REVOLUTION SIMPRODUCTS Non-Motorised TQ to the BU0836 Card

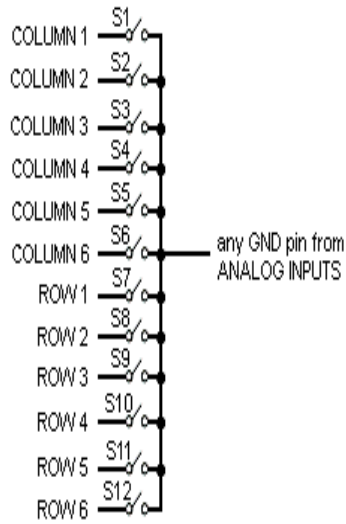

Input

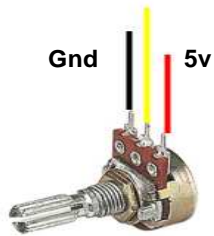

Potentiometer Connection Orientation


Simple Button Connections
 No Diodes required

BU0836 Calibrates In Windows and FSUIPC


For More Connection Options see Leo Bodnars Product Page at www.leobodnar.com

Wire Colours are for indication Only


Throttle 1
 To Analog Input 1
 X Axis

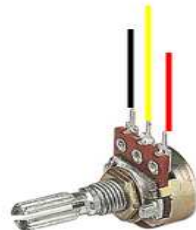


Throttle 2
 To Analog Input 2
 Y Axis

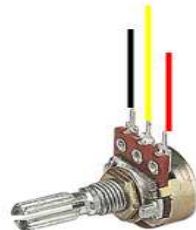


Flaps
 To Analog Input 3
 Z Axis

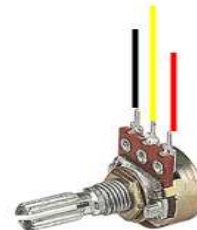



Spoiler
 To Analog Input 4
 X Rotation

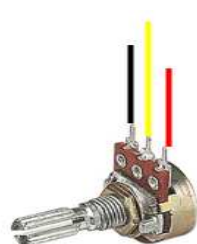

Reverser 1
 To Analog Input 5
 Y Rotation

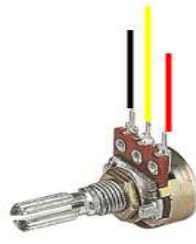

Reverser 2
 To Analog Input 6
 Z Rotation

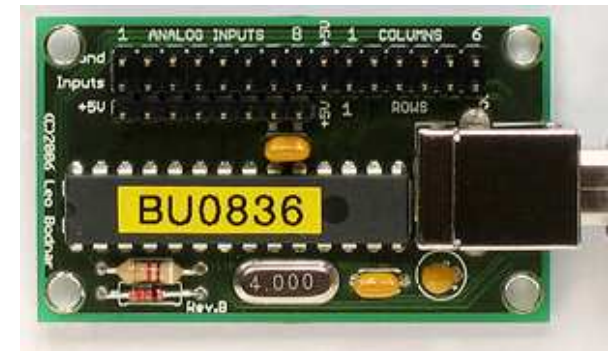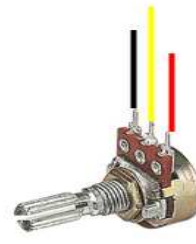

Title Revolution Simproducts TQ Wiring Diagram		
Author Ian P. Sissons ian@737ng.co.uk		
File		Document RSTQ1
Revision 1.0	Date 1st November 2010	Sheets 1 of 1